



RIVIERA Classic

COKIN France s.a.s.u. - 32 rue du Jura 94150 Rungis, France


Introducing Riviera Classic

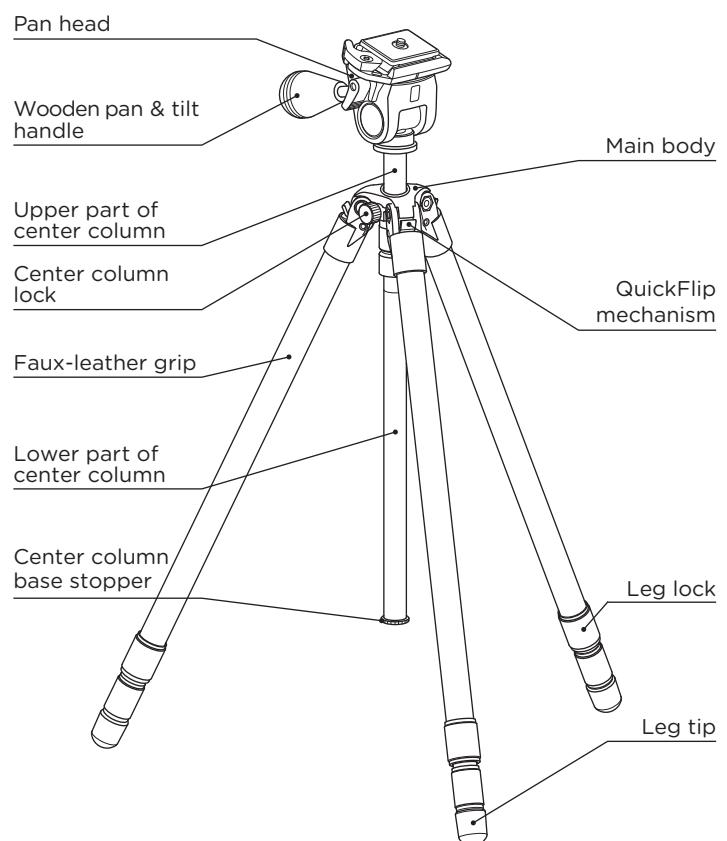

Pan head with wooden handle

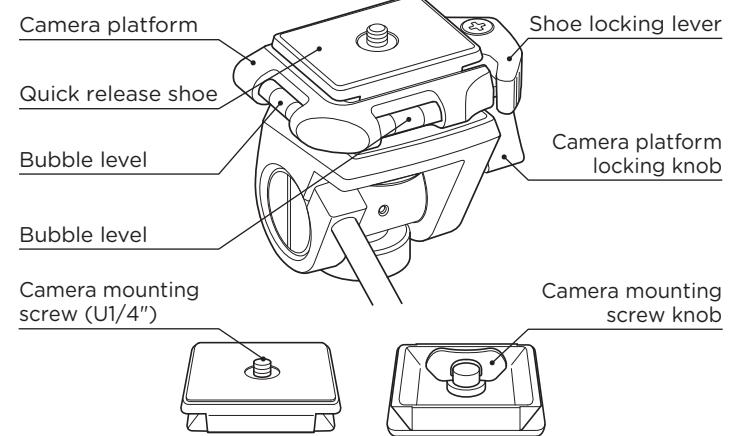

QuickFlip lever

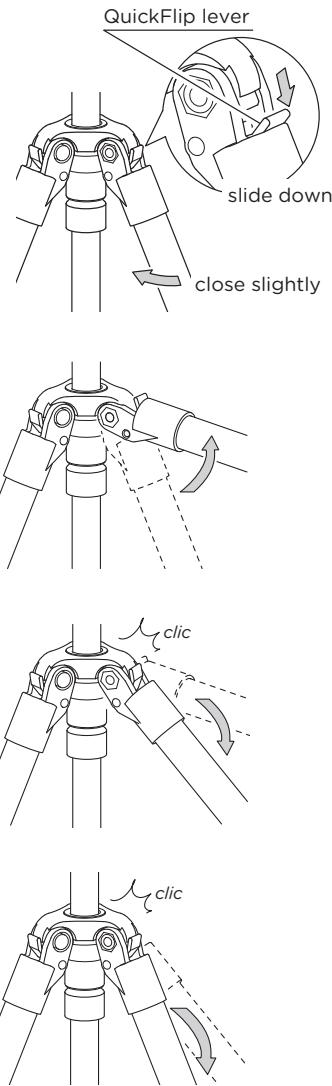


Specifications


Max. operating height	160 cm • 63 in
Folded length	60 cm • 23.6 in
Max. center column ext.	29.7 cm • 11.7 in
Weight	1.54 kg • 3.4 lbs
Max. loading capacity*	5 kg • 11 lbs

* Do not overload. Even if your gear is under the maximum load capacity, check how its weight is balanced on the tripod. For example, telephoto lenses can unbalance the tripod and make it fall down.

Low position

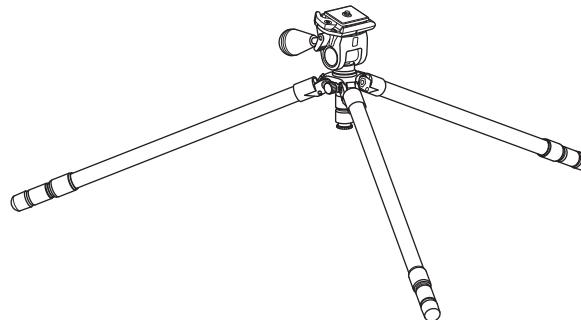


Remove the lower part of the center column when setting the legs in the lowest position.

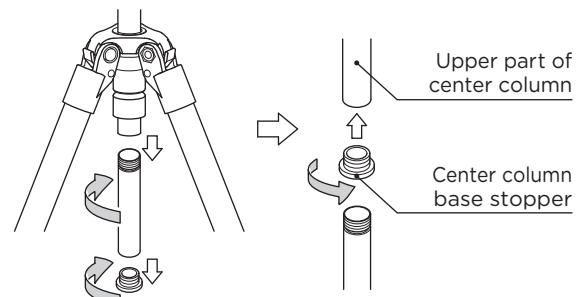


Rotate the lower part of the center column and the base stopper counterclockwise. Attach the base stopper to the bottom of the upper center column to prevent it from slipping out of the tripod.

Inverting the center column

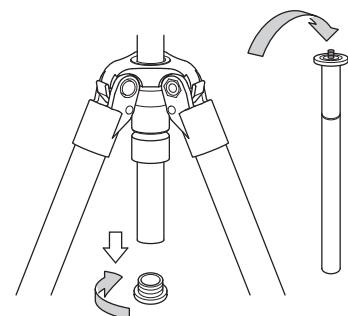


Remove the center column base stopper and pull out the center column.

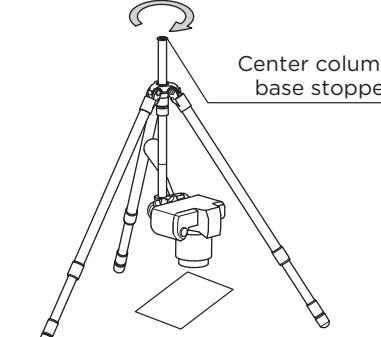


Insert the center column from the bottom of the tripod base and tighten the column lock. Make sure to re-attach the center column base stopper in order to prevent it from slipping out accidentally.


Warning

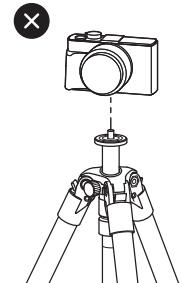

Do not attach a camera directly to the pan head attachment screw as it may damage both the camera and the attachment screw.

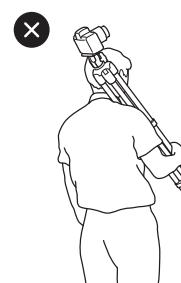

Do not carry your tripod when the camera is still attached to the pan head as it may result in unexpected accident.

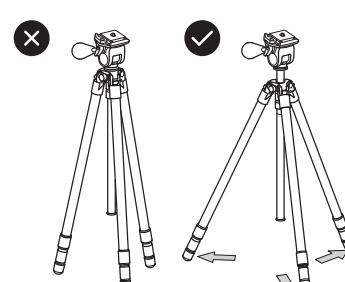

Make sure all levers, knobs and handle are securely tightened before attaching your camera.

Make sure the three legs are opened to their maximum.

Maintenance

Do not apply any grease nor oil to Riviera Classic and its mechanisms.

Clean with a wet soft cloth only.

Avoid extreme heat and never use it close to a flame.

The pan-handle wood aspect will change overtime. This is normal and part of what makes it unique. Do not use an abrasive cloth on it as it can remove the protective varnish.

Riviera Classic soft case is hand-washable only. Never tumble dry.

Warranty


This COKIN tripod has been manufactured under precise standards and has undergone rigorous controls during its assembling. It is certified free of defects and its warranty covers parts and labor for a period of two (2) years from the date of purchase from an authorized dealer.

This warranty does not cover problems or damages caused by misuse, accident, improper handling, repairing by unauthorized service, water or other substances. For more information please contact your dealer or the website of COKIN: www.cokin.com


RIVIERA Classic

COKIN France s.a.s.u. - 32 rue du Jura 94150 Rungis, France


Présentation de Riviera Classic

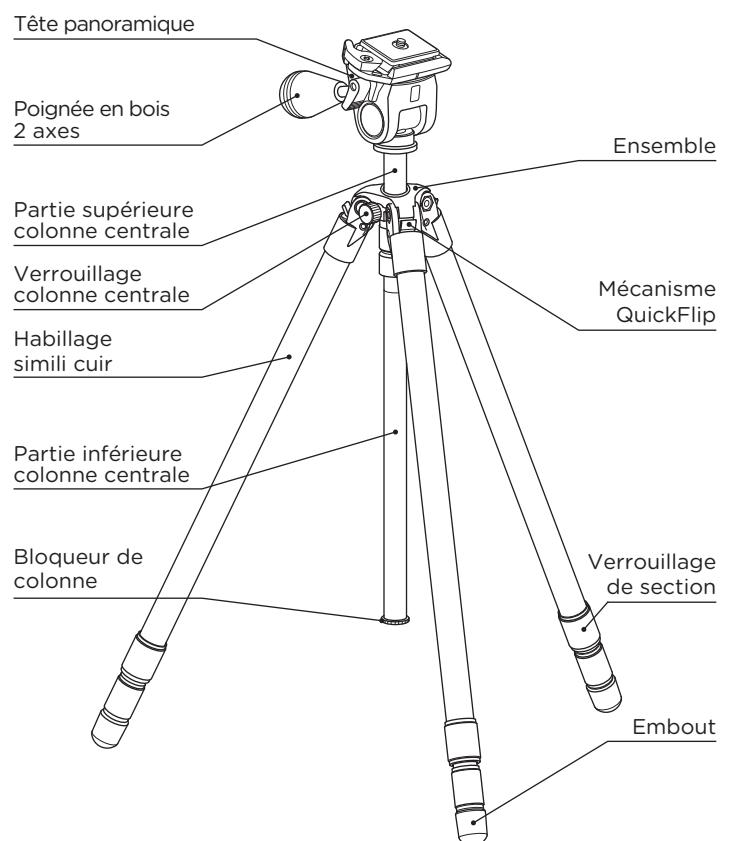

Position basse

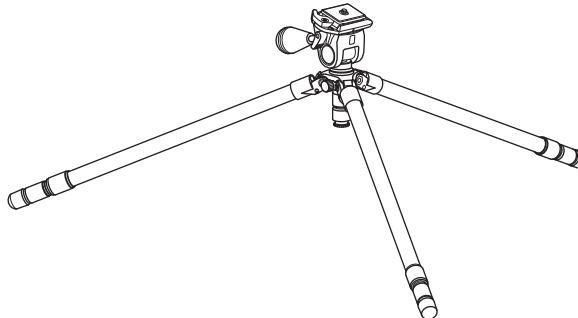


Enlever la partie inférieure de la colonne centrale quand le trépied est en position basse.

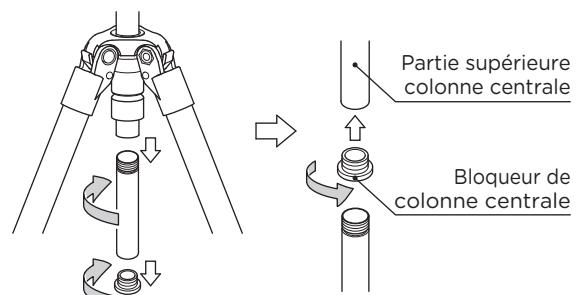


tourner la partie inférieure de la colonne centrale et le bloqueur dans le sens inverse des aiguilles d'une montre. Attacher le bloqueur à la partie supérieure de la colonne centrale pour éviter qu'elle ne glisse.

Inverser la colonne centrale

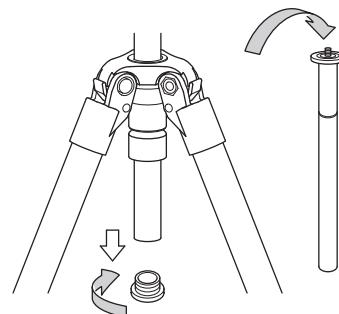


Dévisser le bloqueur de colonne pour la retirer de la base du trépied.

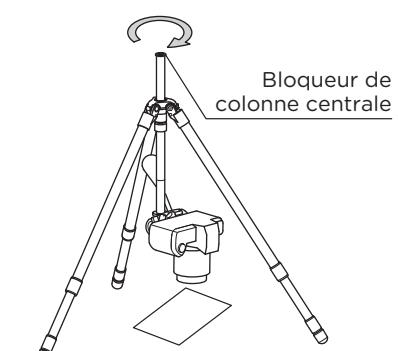

Insérer la colonne centrale de bas en haut et serrer le verrouillage. Penser à remettre le bloqueur en place pour éviter que l'ensemble ne tombe accidentellement.

Poignée panoramique en bois

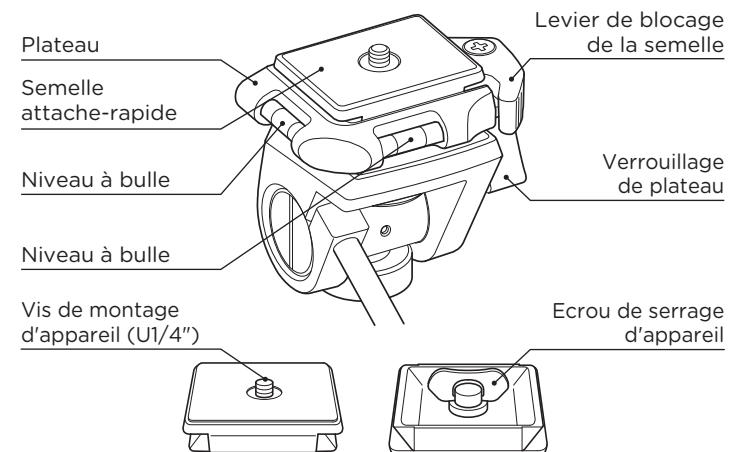


Spécifications


Hauteur Max.	160 cm
Longueur (replié)	60 cm
Extension colonne centrale	29,7 cm
Poids	1,54 kg
Charge max. supportée*	5 kg

* Ne pas surcharger. Même si votre matériel pèse moins que la charge maximale supportée, vérifiez l'équilibre du trépied. Par exemple un téléobjectif peut déséquilibrer le trépied et faire tomber l'ensemble.


Levier QuickFlip

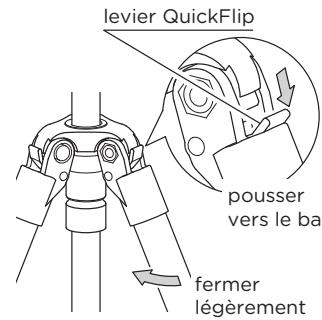


Fermer légèrement la section et pousser le levier QuickFlip vers le bas.

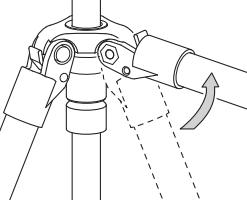

Relever la section jusqu'à la butée. C'est la position basse.

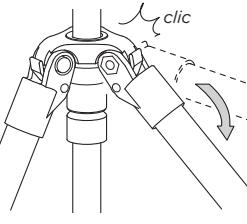


Fermer doucement la section jusqu'au «clic». C'est la position intermédiaire.

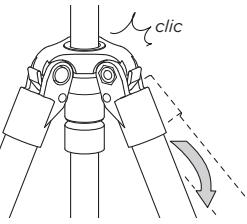


Fermer la section jusqu'au «clic» suivant. C'est la position normale.


Attention

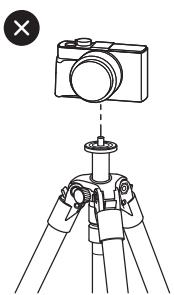

Ne pas attacher un appareil directement sur la vis dédiée à la tête panoramique au risque d'endommager l'appareil et le trépied.

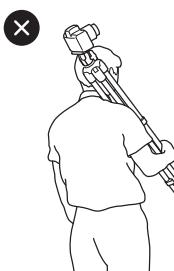

Ne pas transporter le trépied lorsque l'appareil est toujours attaché à la tête.

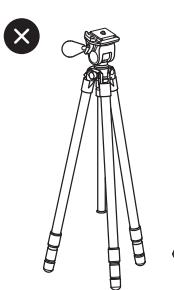

Vérifier que les leviers, verrous et poignée sont bien serrés avant d'attacher l'appareil. Vérifier que les trois sections sont ouvertes au maximum.

Maintenance

Ne pas appliquer de graisse ou d'huile au Riviera Classic et ses mécanismes.

Nettoyer uniquement avec un chiffon humide.

Eviter les chaleurs extrêmes et ne jamais utiliser près d'une flamme.

L'aspect de la poignée en bois va changer avec le temps. C'est normal et cela contribue à la rendre unique. Ne pas utiliser de chiffon abrasif sous peine d'altérer le vernis de protection.

La sacoche de Riviera Classic est uniquement lavable à la main. Ne jamais passer au sèche-linge.

Garantie

Ce trépied COKIN a été fabriqué selon des normes précises et a subi des contrôles rigoureux durant sa fabrication. Il est certifié exempt de défauts et garanti pièces et main d'oeuvre pour une période de deux (2) ans à compter de la date d'achat auprès d'un revendeur agréé.

Cette garantie ne couvre pas les problèmes et dommages causés par une mauvaise utilisation, un accident, une mauvaise manipulation, une réparation réalisée par un service non autorisé, par l'eau ou autres substances. Pour de plus amples renseignements nous vous invitons à prendre contact avec votre revendeur, ou le site internet de COKIN : www.cokin.com